

- Keep combustible materials , such as furniture, pillows, bedding, paper, clothes and curtains at least 3 ft from the front of the heater and keep them away from the sides, top and rear.
- DO NOT** place towels or other objects on the heater.
- Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
- **DO NOT** operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner , Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- This heater is not intended for use near water, in bathrooms, laundry areas and similar indoor locations. **NEVER** locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, **DO NOT** immerse in water or other liquids.
- **DO NOT** touch the power button , heater front, or plug with a wet hand.
- **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire , **DO NOT** block the air intakes or exhaust in any manner. **DO NOT** use on soft surfaces. like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts in side . **DO NOT** use in areas where gasoline, paint, explosive and /or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- To avoid fire or shock hazard , plug the unit directly into a 120V AC electrical outlet.

- To disconnect heater, press the Power button to turn the heater off, then remove plug from outlet. Always unplug the unit before moving or cleaning, or whenever the heater is not in use .
- Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
- **DO NOT** use outdoors.
- WARNING:** To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
- **DO NOT** attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
- Connect to properly grounded outlets only.
- Save these instructions.

SERVICE INSTRUCTIONS:

Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.

If you have any questions regarding this unit's operation or believe any repair is necessary.

Please write to us at:

Heat Surge
8000 Freedom Ave. NW
North Canton, OH 44270



INSTRUCTION MANUAL &
OWNER'S GUIDE

Please read and save these instructions




www.heatsurge.com
8000 Freedom Ave. NW
North Canton, OH 44720
1-800-924-7964
custserv@heatsurge.com

CONTROL PANEL



- | | |
|----------------------|--|
| 1. Heating grid | 7. Timer (Timer /Temperature transformation) |
| 2. Fireplace effect | 8. Temperature and timer controller - |
| 3. Main power switch | 9. Temperature and timer controller+ |
| 4. LED display | 10. On/off switch |
| 5. Contour plug | 11. ventilation grille |
| 6. Power | 12. Plug rotation button |

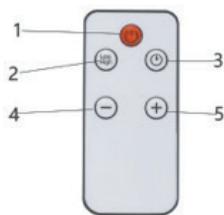

- | |
|--------------------------------------|
| 1. On/Off switch |
| 2. Power |
| 3. Timer |
| 4. Temperature and timer controller- |
| 5. Temperature and timer controller+ |

NOTE:

- Align the fan heater to fit your 3 prong outlet. To do this, press the plug rotation button and turn the plug until it clicks into place again.
- Plug the device into a suitable power outlet.
- Do NOT plug this heater into a surge protector. This heater must be plugged in upright. Do NOT use this heater plugged in lying down.
- This control panel is a touch screen that produces a drip sound when pressed by any button.
- You can also control the heater with a remote control.
- This device is only for use in well-insulated rooms or for occasional use.

OPERATING INSTRUCTIONS:

- Turn on the device with main power switch, the power switch light up, then press the switch, the fan starts working and the chimney fire effect starts on.
- Press the power switch to select powers, there are two heating levels to be chosen (Low/High) When the LED display shows "HH" means HIGH level, "LL" means LOW level.

- The temperature can be adjusted from 15° to 35° or 59°F to 95°F by using "+"/"-" buttons. The temperature will be displayed on the LED display
- Press this button for 3 seconds, can achieve "°F" and "°C" transformation.
- This product has a 12 hours' timer, with pressing on Timer button, you can select a certain time for working, meanwhile, number will be shown on display.

TIMER - AUTO SHUT-OFF

To use this heater's auto shut-off timer, ensure your heater is turned on. Press the "Timer" button, and the LED display show the number of hours you want the heater to run before turning off automatically. Keep pressing the "Timer" button until you reach your desired set time, once the LED display shows the desired number of hours, wait 3 seconds without pressing any buttons, auto shut off turns on.

- Pressing the "Timer" button allows you to scroll through 1 to 12 hours with 1 hour increments.
- To turn off the auto shut-off timer, press the "Timer" button until the LED display shows "0"
- To turn off the auto shut-off timer, press the "Timer" button until the LED display shows "0"

NOTE: Turning off the heater will stop the heating process only. The fan will continue to work for 30 seconds to allow for the internal ceramic heating element to cool. After 30 seconds, the heater will shut down automatically.

CAUTION:

Never cover the heater as this may lead to risk of fire

CLEANING

- Flip the Power switch to turn off the heater.
- Unplug the unit and let it cool completely
- To keep the heater clean, the outer shell may be cleaned with a soft damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth

CAUTION: DO NOT let liquid enter the heater

- DO NOT** use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- DO NOT** immerse the heater in water.
- Wait until the unit is completely dry before use.

OVERHEAT SAFETY FEATURE

This heater is equipped with an internal overheat safety feature. When the heater's internal components reach a certain temperature that may cause overheating and possible fire, the heater will automatically shut off.

WARNING: It is normal for the rear of the heater to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

BASIC TROUBLESHOOTING

If the heater will not operate, please check the following before seeking repair advice:

- Check if the plug is plugged into an electrical outlet, if not, plug in.
- Check if electricity to the electrical outlet is working.

SAFETY INSTRUCTIONS/ WARNING

READ ALL INSTRUCTIONS BEFORE USING THIS FAN. TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Read **ALL** instructions before using this unit.
- **CAUTION:** Risk of Electric Shock. **DO NOT** open or try to repair the heater yourself.
- This heater may get hot when in use. To avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater.