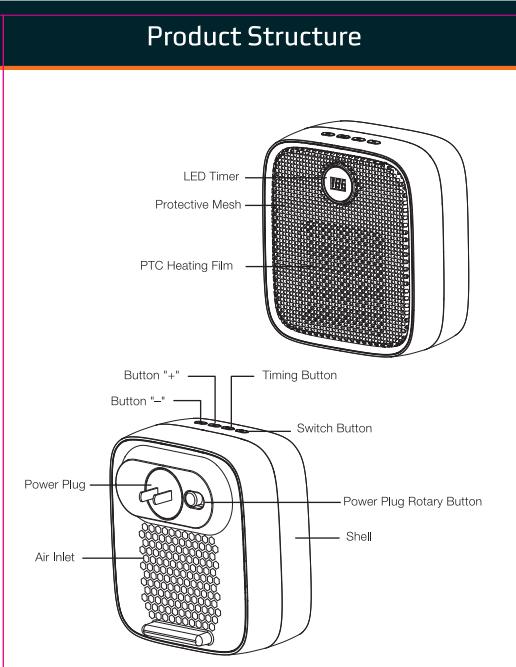


Instructions	Specification	HEAT SURGE ULTRA EFFICIENT MiniMax™ Instruction Manual																						
<p>① Connect the power plug.</p> <p>② Switch button: Press the "①" button to turn on the heater, Press again to turn off.</p> <p>③ Timing button: Press the "④" button to set up a 1 hour timer, it will be automatically shutdown after an hour. Press again the timing button to increase one more hour, and so on until to 9h then back to 1h timer. If the timing button is not pressed or the +/- key is pressed in 5s, the display will return to the temperature display. (Default timing of 9 hours without any operation)</p> <p>④ Button "+": Press "④" button, temperature value +1, when the temperature is set at 35°C, then press "④" button. At this time, the warm air will continue to output no matter what the ambient temperature is. After on, press "④" Key, the gear will not increase.</p> <p>⑤ Button "-": Press the "④" key, and the temperature value is -1. When the gear temperature is set at 16°C, press the "④" button again, and the gear temperature will no longer be decreased.</p> <p>NOTE: When shutting down do not directly unplug the unit. It is recommended to turn off the power switch first, wait for the unit to cool and then remove it from the outlet to improve the service life of the product.</p> <p>Maintenance</p> <ul style="list-style-type: none"> Before cleaning this product, please unplug the power and wait for the body to cool down before proceeding. Clean the air inlet and outlet regularly, and it is recommended to use a dry cloth to clean the product. When not using this product, please turn off the power and unplug the power cord. 	<table border="1"> <tbody> <tr> <td>Product Name</td><td>Ultra Efficient MiniMax</td></tr> <tr> <td>Model No</td><td>WT-WA4</td></tr> <tr> <td>Materials</td><td>Plastic + High Temperature Plastic + Hardware</td></tr> <tr> <td>Voltage</td><td>AC110V</td></tr> <tr> <td>Power</td><td>500W</td></tr> <tr> <td>Frequency</td><td>50Hz-60Hz</td></tr> <tr> <td>Timer</td><td>1-9 hr</td></tr> <tr> <td>Size</td><td>129.5 x 91 x 144.5 mm 5 x 3.5 x 5.5 inches</td></tr> <tr> <td>Net Weight</td><td>442 g / 0.975 lbs</td></tr> <tr> <td>Gross Weight</td><td>528 g / 1.164 lbs</td></tr> <tr> <td>Standard</td><td>GB4706.1-2005 GB 4706.23-2007</td></tr> </tbody> </table>	Product Name	Ultra Efficient MiniMax	Model No	WT-WA4	Materials	Plastic + High Temperature Plastic + Hardware	Voltage	AC110V	Power	500W	Frequency	50Hz-60Hz	Timer	1-9 hr	Size	129.5 x 91 x 144.5 mm 5 x 3.5 x 5.5 inches	Net Weight	442 g / 0.975 lbs	Gross Weight	528 g / 1.164 lbs	Standard	GB4706.1-2005 GB 4706.23-2007	 <p>Please read this instruction manual carefully before using the product and keep it in a safe place</p>
Product Name	Ultra Efficient MiniMax																							
Model No	WT-WA4																							
Materials	Plastic + High Temperature Plastic + Hardware																							
Voltage	AC110V																							
Power	500W																							
Frequency	50Hz-60Hz																							
Timer	1-9 hr																							
Size	129.5 x 91 x 144.5 mm 5 x 3.5 x 5.5 inches																							
Net Weight	442 g / 0.975 lbs																							
Gross Weight	528 g / 1.164 lbs																							
Standard	GB4706.1-2005 GB 4706.23-2007																							

Product Structure	Disposal and Recycling Information	Warranty Card
<p>Note</p> <ul style="list-style-type: none"> When this product is in running, DO NOT cover or place any object close to the heating source. Before use, please check whether the power supply meets the requirements of this product, and confirm that the rated current of the socket is greater than 10A. Do Not leave the heater running unattended, parent or guardian should always accompany children when unit is in use. Do Not disassemble product and handle unit with care. It is strictly forbidden to put the product into fire or other high temperature environment, so as to avoid the risk of fire and explosion. This product is forbidden to be used in flammable, explosive, dusty, oily, and humid environments. Please use this product only only in an appropriate grounded wall outlet in good repair, Do Not use in outlets that are loose. Do Not use this product near curtains, beds and other combustible objects. This product is only suitable for indoor environments. Do Not touch the protective mesh when this product is working to avoid burns. Do Not touch the power switch or unplug the power cord with wet hands to prevent electric shock. Keep products out of reach of children and pets. If the plug or unit is damaged, in order to avoid danger, it must be replaced by a professional from the manufacturer's maintenance department or similar department. Stop using the product immediately if the unit malfunctions in any way and contact customer service. Do Not use this heater when unattended and unplug the heater when not in use. Always use the heater in a grounded wall outlet, never use an extension cord or power strip. 	 <p>This symbol indicates that your product must be disposed of properly. According to local laws and regulations, when your product reaches its end of life, contact your local authorities to learn about recycling options.</p>	<p>Model: _____</p> <p>Product Name: _____</p> <p>Date Of Purchase: _____</p> <p>Deal: _____</p> <p>Customer Name: _____</p> <p>Address: _____</p> <p>Tel: _____</p> <p>Thank you for purchasing this Heat Surge product. Our product's warranty period is 12 months starting from the day of purchase. Please complete the warranty card and use for any future warranty service.</p> <p> (For warranty, please cut along the dotted line)</p>